


TESTED • TRUSTED • TOUGH

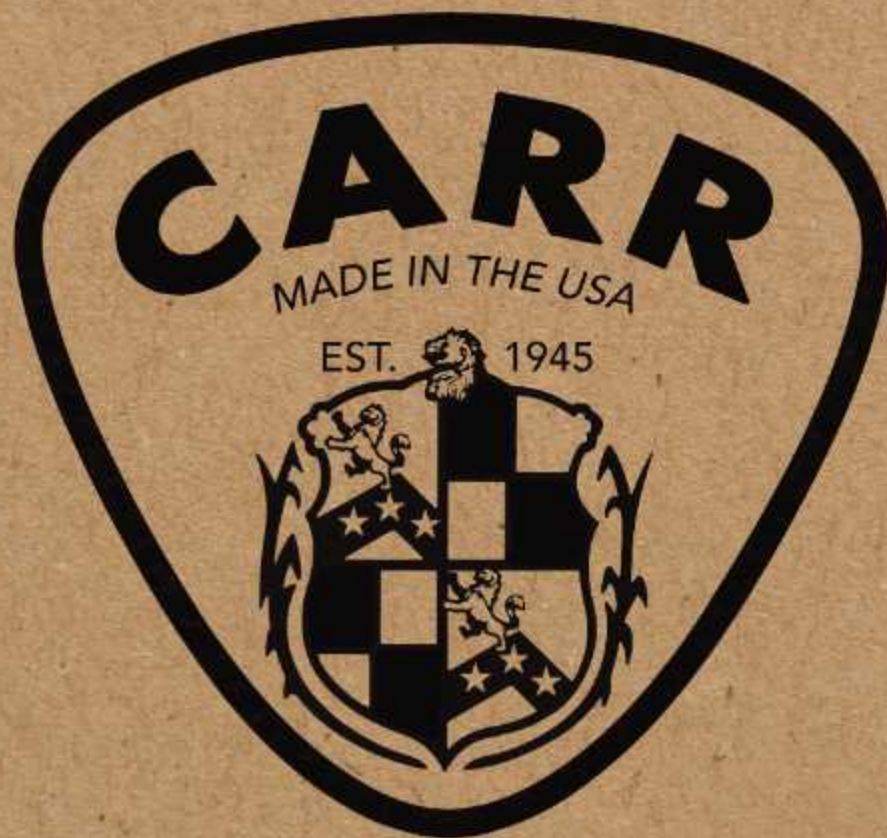

2023

ACCESSORIES CATALOG

OFF-ROAD | TRUCKS | SPECIALTY | INDUSTRIAL | COMMERCIAL



TABLE OF CONTENTS

**American Manufactured
Since 1945**

-

**Never Compromise
On Quality Or Safety**

-

Engineered For Durability & Strength

-

Easy Installation

-

**Ease Of Use,
Even In The Most Demanding
Conditions**

-

**Rugged Designs Give Your
Vehicle A Unique Personal
Style And Appeal**

-

With CARR, Safety Can Be Simple

-

**Built-In Innovation
To Enhance Operator Safety
And Productivity While
On The Job**

■ TABLE OF CONTENTS

NEW PRODUCTS2-4

WORK TRUCK STEPS.....5-6

FACTORY VAN SIDE STEPS7

CARGO VAN STEPS8

GRAB HANDLES8

MEGA STEPS.....9

HD MEGA STEPS.....9

MAXgrip FLIP STEPS.....10

COMMERCIAL/FLEET/INDUSTRIAL.....11

FIRE/EMERGENCY/TRAILER.....12

LD SIDE STEPS13-14

SUPER HOOP SIDE STEPS.....15-16

HOOP II SIDE STEPS17-18

MAXgrip SIDE STEPS19-20

HD HITCH STEPS21

JL 180° LIGHT MOUNT.....22

LIGHT BARS.....22-24

- Do the right thing
- At the right time
- In the right way
- For the right reason

With over 78 years of manufacturing excellence, CARR is a third-generation business that remains firmly committed to serving you and your team members.





SOLD AS SINGLES

AVAILABLE JUNE 2023



■ **NEW Factory Van Side Door Step**

FEATURES

- It pairs perfectly with the CARR Factory Side Steps
- Made from heavy gauge steel, plated and powder coated for superior protection
- Exclusive 52.25" by 4.25" perforated step area for solid footing, narrow enough to avoid road hazards
- Rugged and proven bolt on installation
- Features factory-designed mounting locations

FACTORY VAN SIDE DOOR STEP APPLICATIONS
(SOLD AS SINGLES)

XP3 BLACK XP7 YLW

*15 - '23 Ford Transit Vans (Excluding the Connect)	452001-1	452007-1
---	----------	----------


*NOTE: Excluding the Connect for fitment.

■ **NEW MAXgrip FLIP STEPS**

SafeGuard Your Fleet With MAXgrip Flip Steps

FEATURES

- Hitch-mount or flat mount
- Illuminated LED step surface (optional)
- Innovative stainless-steel spring plate closure design
- Demanding fleet approved 500 lb. weight capacity

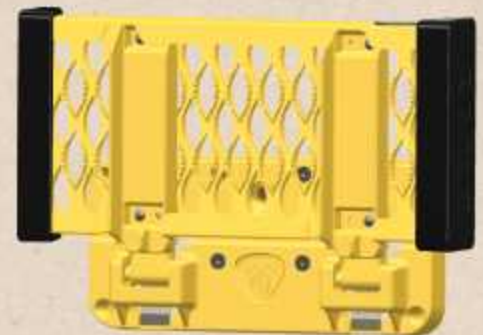

Details on Page 10



NEW PRODUCTS

NEW HD MEGA Van Ladder Rack Step



FEATURES

- Safe, easy access to roof-mounted racks
- Fleet Approved
- Folds down for use, then securely folds back up to store when not in use
- 500 lb. weight capacity, utilizing existing mounting locations
- Simple installation on the driver or passenger side



Illuminated step surface - built-in LED (optional)

SOLD AS SINGLES

DIMENSION: 14" width, 8" depth

STEP PAD: Aggressive and appealing tread design for a non-slip surface

STEP: Flat step area for increased safety

LOAD CAPACITY
✓ HEAVY DUTY
500 LBS



HD MEGA VAN LADDER RACK STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
'09 - '23 Chevy Express/GMC Savana Van HD Mega Ladder Rack Step (Step surface NOT illuminated)	195001	195002	195007
'09 - '23 Chevy Express/GMC Savana Van HD Mega Ladder Rack Step (LED illuminated Step Surface)	196001	196002	196007



■ NEW MAXno-drill Side Step

FEATURES

- Innovative, slip-resistant tread pattern and debris flow-through channels
- Corrosion-resistant, heavy-duty aluminum cast alloy
- Rugged bolt on installation, no drilling required
- Illuminated step surface – built-in LED (optional)
- Simple to install using factory-designed mounting points



AVAILABLE JULY 2023



SOLD AS SINGLES

DIMENSION: 10" width, 5.5" depth

STEP PAD: Aggressive and appealing tread design for a non-slip surface

STEP: Flat step area for increased safety

MAXno-drill SIDE STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
'20 - '23 Sierra/Silverado 2500-3500 C&K PU / Fullsize / All Cabs / All doors (GAS AND DIESEL)	140101-1	140102-1	140107-1
'19 - '23 Sierra/Silverado 1500 C&K PU / Fullsize / All Cabs / All doors	140201-1	140202-1	140207-1



WORK TRUCK STEPS DEPLOYS IN AND OUT




WORK TRUCK STEPS

Gives safe and easy access to the side and top rack of any service truck where exterior tool boxes are used.

FEATURE

- Hands-free
- Fully assembled - mounting straps and hardware included for installation
- 500 lb. weight capacity
- Easy to install and easy to use
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on the step
- Large 12", 16" or 24" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in to lock when not in use!

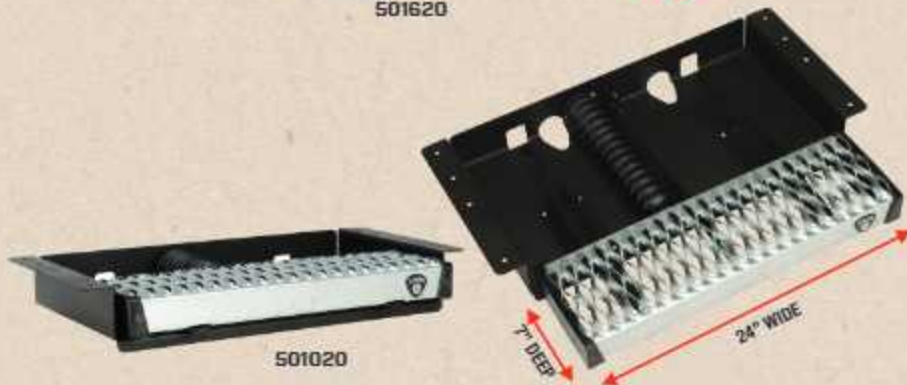

HEAVY-DUTY AND HANDS-FREE

DEPLOY AND CLOSE WITH YOUR FEET

WORK TRUCK STEP APPLICATIONS

XG0 GALVANIZED

XP7 YLW

	XG0 GALVANIZED	XP7 YLW
WTS 12" GSS (Grip Strut Step)	*501030	*501037
WTS 16" GSS (Grip Strut Step)	*501620	*501627
WTS 24" GSS (Grip Strut Step)	*501020	*501027

*NOTE: These steps fit any flat surface with access to the other side.



LOAD CAPACITY
✓ HEAVY DUTY
500 LBS

WORK TRUCK PLATFORM STEPS

DEPLOYS IN AND OUT




WORK TRUCK PLATFORM STEPS



The CARR Work Truck Platform Step puts everything within reach. Equip your work truck with a massive 15-inch retractable platform. Releases with just the press of your foot and securely locks in place when stowed away. Aggressive open treads contribute to a safe, comfortable standing platform that easily accommodates extra-large work boots.

FEATURES

- Hands-free operation
- Fully assembled - mounting straps and hardware included for installation
- 500 lb. weight capacity
- Easy to install and use
- Mounting straps and hardware provided
- 24" or 31" wide with an impressive 15" depth
- Backed by a limited lifetime warranty on all materials and craftsmanship

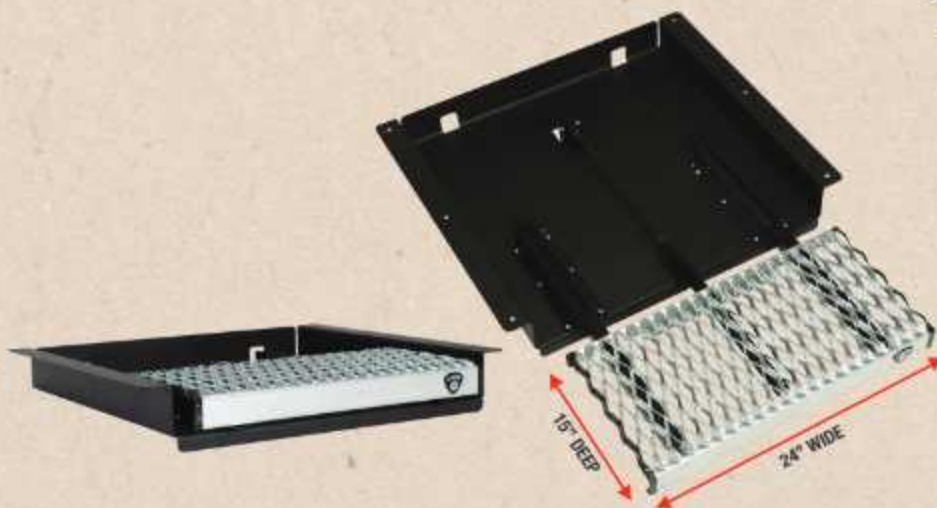

501520



501060



WORK TRUCK PLATFORM STEP APPLICATIONS

XG0 GALVANIZED

XP7 YLW

	XG0 GALVANIZED	XP7 YLW
WTS 24" Deployable Platform Step (Grip Strut)	*501520	*501527
WTS 31" Deployable Platform Step (Grip Strut)	*501060	*501067

*NOTE: These steps fit any flat surface with access to the other side.





FACTORY VAN SIDE STEPS

FACTORY VAN SIDE STEPS

FEATURES


- Safer entry and exit from your van
- 20" wide fully functional step area
- Made from heavy gauge steel, plated and powder coated for superior protection
- Exclusive perforated step area for solid footing
- Rugged bolt on installation, no drilling required
- Super easy installation, hardware included
- Limited lifetime warranty on materials and craftsmanship



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.



FACTORY VAN SIDE STEP APPLICATIONS

XP3 BLACK

XP7 YLW

	XP3 BLACK	XP7 YLW
*15 - '23 Ford Transit Vans (Excluding the Connect) - front doors only	451001	451007
*10 - '23 Mercedes Sprinter Van - front doors only	451011	451017

*NOTE: Excluding the Connect for fitment



CARGO VAN STEPS (REAR AND SIDE DOORS) GRAB HANDLES



■ CARGO VAN STEPS

This hands-free deployable step gives you maximum safety and accessibility when entering and exiting the side door of your van. Reduces a van's step height by at least 7 inches.

**HEAVY-DUTY AND
HANDS-FREE**

DEPLOYS IN AND OUT

LOAD CAPACITY
✓ HEAVY DUTY
500 LBS



FEATURES

- Hands-free
- Fully assembled, mounting brackets and hardware included
- 500 lb. weight capacity
- Easy to use and install
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on step
- Large 24" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!



REAR DOOR

SIDE DOOR

CARGO VAN STEP APPLICATIONS

	XG0 GALV	XP7 YLW
'03 - '23 24" WTS - Chevy Cargo Van (Grip Strut) (Side door)	501050	501057
'13 - '23 24" WTS - Ford Transit Van (Grip Strut) (Side door)	501070	501077
'13 - '23 24" WTS - Ford Transit Van (Grip Strut) (Rear door)	501079	501977
'12 - '23 24" WTS - Mercedes Sprinter (Grip Strut) (Side door)	501080	501087
'14 - '23 24" WTS - Dodge Ram Promaster Van (Grip Strut) (Side door)	501090	501097



■ GRAB HANDLES

FEATURES

- Easy bolt-on installation
- Cast from alloyed aluminum
- Powder coated and polished finishes
- Innovative non-slip finger grooves built-in



10 Inch

GRAB HANDLE APPLICATIONS	XM3 POLISHED	XP3 BLACK	XP7 YLW
Grab Handle 10"	200032	200031	200037
Grab Handle 20"	200042	200041	200047



MEGA STEPS HD MEGA STEPS



MEGA STEPS

FEATURES

- Heavy-duty foldable steps are large—14" by 6"
- Specifically developed for all 2" and 2-1/2" hitch receivers
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a trailer hitch
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty



MEGA STEP APPLICATIONS (SOLD AS SINGLES)


	XP3 BLACK	XM4 MATTE	XP7 YLW
Mega Step Flat Mount	190001	190005	190007
Mega Hitch Step 2 and 2 1/2" receivers	190011	190015	190017

HD MEGA STEPS



FEATURES

- Heavy-duty foldable steps are large—14" by 8"
- Illuminated with grab handle slots
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a 2" or 2-1/2" hitch receivers
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty
- NFPA Compliant

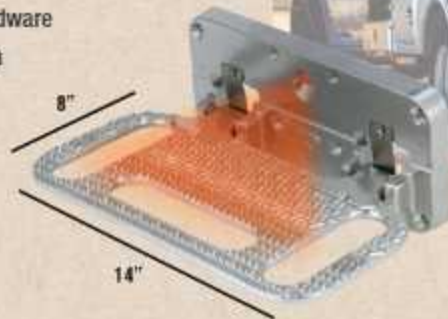

LOAD CAPACITY
✓ **HEAVY DUTY**
500 LBS



HD MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
HD Mega Step Flat Mount - with LED light	193001	193002	193007
HD Mega Hitch Step 2 and 2 1/2" receivers - with LED light	193011	193012	193017
HD Mega Step Retro Fit (Fire Trucks only) - with LED light	-	193022	-
HD Mega Step Flat Mount - no light	194001	194002	194007
HD Mega Hitch Step 2 and 2 1/2" receivers - no light	194011	194012	194017



MAXgrip FLIP STEPS



■ MAXgrip FLIP STEPS


SafeGuard Your Fleet With MAXgrip Flip Steps

FEATURES

- Hitch-mount or flat mount
- Illuminated LED step surface (optional)
- Innovative stainless-steel spring plate closure design



SOLD AS SINGLES

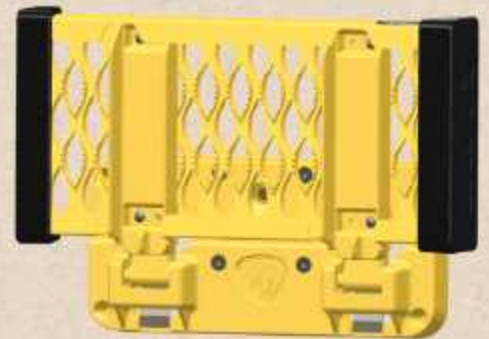

GALVANIZED
CARR's Xtreme Galvanized finish penetrates the metal to help prevent the formation of rust and corrosion.



BLACK
CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



SAFETY YELLOW
CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

MAXgrip FLIP STEP APPLICATIONS

	XG0 GALV	XP3 BLACK	XP7 YLW
MAXgrip FLIP Step Flat Mount - no light	197000	197001	197007
MAXgrip FLIP Hitch Step 2 and 2 1/2 inch receivers - no light	197010	197011	197017
MAXgrip FLIP Step Flat Mount - with LED light	198000	198001	198007
MAXgrip FLIP Hitch Step 2 and 2 1/2 inch receivers - with LED light	198010	198011	198017

LOAD CAPACITY
✓ **HEAVY DUTY**
500 LBS

DIMENSION: 15" width, 8" depth

STEP PAD: MAXgrip non-slip tread pattern

STEP: Flat step area for increased safety





■ Steps and Grab Handles Available in Safety Yellow XP7 YLW



MAXgrip SIDE STEPS
20" Width



MAXgrip FLIP STEPS
14" Width



LD SIDE STEPS
Additional 1" Depth Step Area
14" Width



HOOP II SIDE STEPS
10" Width



SUPER HOOP SIDE STEPS
20" Width



MEGA STEPS
14X6 Folding Step
(Flat Mount and Hitch Step)



HD MEGA STEPS
14X8 Folding Step with Built-In
Grab Handle/Optional Lighting
(Flat Mount and Hitch Step)




FACTORY VAN SIDE STEPS
20" Width



20" GRAB HANDLE 10" GRAB HANDLE



31" WORK TRUCK
PLATFORM STEPS

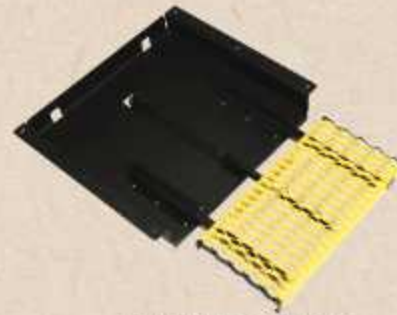

24" WORK TRUCK
PLATFORM STEPS



24" WORK TRUCK STEPS



16" WORK TRUCK STEPS



12" WORK TRUCK STEPS

**FIRE/ EMERGENCY
LIMITED LIFETIME WARRANTY**



**EMERGENCY
VEHICLES**




31" WORK TRUCK PLATFORM STEP

TRAILERS





LD SIDE STEPS

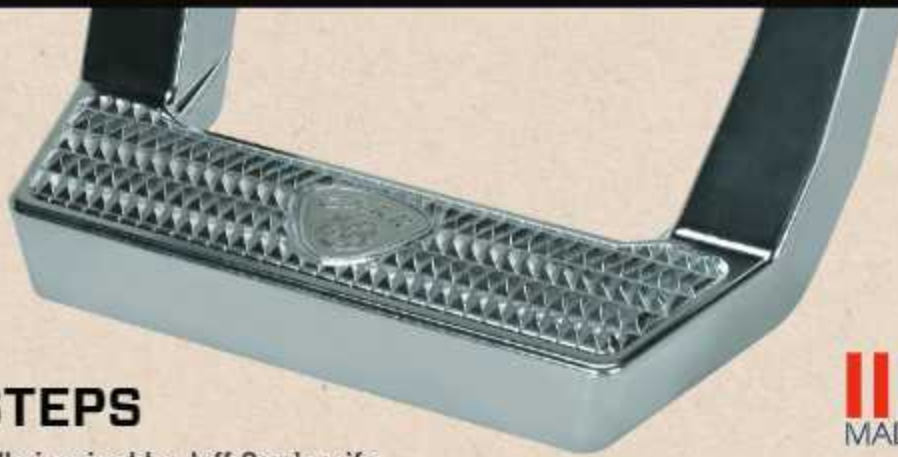

LD SIDE STEPS

The LD step was actually inspired by Jeff Carr's wife, Lynn. Hence the name "LD Step" (Lynn's Design). This step gives the user easier access to the vehicle due to the wider and deeper stepping surface that extends further than our other steps. The LD step is available in our three durable finishes, and installation is a cinch with our mounting system.



XM3

POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

FEATURES

- Easier entry and exit from your vehicle
- 14" wide functional step area
- Extends further than our current steps
- Made of corrosion-resistant, durable cast aluminum alloy for extreme longevity
- NEW aggressive and appealing tread design for a non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design that enhances the looks of current vehicle body styles
- Limited lifetime warranty on materials and craftsmanship

DIMENSION: 14" width, 4" depth

STEP PAD: Aggressive and appealing tread design for a non-slip surface

STEP: Flat step area for increased safety



LD SIDE STEP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '23 Colorado/Canyon	113332	113331	113337
'02 - '09 Trail Blazer/Envoy	114032	114031	114037
'02 - '13 Avalanche	114032	114031	114037
'02 - '23 Denali Truck	114032	114031	114037
'20 - '23 Sierra/Silverado 2500-3500 HD C&K PU/Fullsize/All Cabs All Doors (GAS AND DIESEL)	113332	113331	113337
'19 - '23 Sierra/Silverado 1500 C&K PU/Fullsize all cabs (All doors)	113332	113331	113337
'88 - '19 Sierra/Silverado 1500 C&K PU / Fullsize / All Cabs / All doors - 2018 Body Style/Light Duty	114032	114031	114037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors (DOES NOT FIT DIESEL)	114032	114031	114037
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	114032	114031	114037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	114032	114031	114037
'76 - '91 Suburban	114032	114031	114037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	114032	114031	114037
'87 - '96 Fullsize Van	114032	114031	114037

DODGE/RAM

'19 - '23 Ram GAS 1500 New Body Style	119112	119111	119117
'09 - '23 Ram GAS 1500-5500 Classic Body Style	119772	119771	119777
'09 - '23 Ram DIESEL 2500-5500 PU beds only	119772	119771	119777
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	119772	119771	119777
'94 - '08 Ram 1500-5500	114032	114031	114037
'74 - '93 Fullsize PU	114032	114031	114037
'97 - '09 Dakota 2-Door Only	114032	114031	114037
'02 - '06 Sprinter Van	114502	114501	114507
'07 - '09 Sprinter Van	115772	115771	115777
'74 - '92 Ram Charger	114032	114031	114037
'83 - '91 Raider	114032	114031	114037

FORD/MERCURY

'17 - '23 Super Duty Aluminum body F250 - F550 DOES NOT FIT F550 standard/single cabs	118222	118221	118227
'99 - '16 Super Duty All Cabs (All Doors)	114872	114871	114877
'15 - '23 F-150 Aluminum body All doors/All cabs	118222	118221	118227
'04 - '14 F-150 All Cabs (All Doors)	114032	114031	114037
'01 - '03 F150 SuperCrew (All Doors)	114032	114031	114037
'97 - '04 F-150/F-250 LDF-150 Heritage PU (All Doors)	114032	114031	114037
'97 - '03 F-150 Quad Cab (All Doors)	114032	114031	114037
'21 - '23 Bronco (DOES NOT FIT Bronco Sport)	114502	114501	114507
'19 - '23 Ranger Super Crew - 4 door	114502	114501	114507
'19 - '23 Ranger Super Cab - Front doors only	114502	114501	114507
'98 - '11 Ranger 2-Door Only - No Ext. Cab	114992	114991	114997
'00 - '05 Excursion (All Doors)	114872	114871	114877
'18 - '23 Expedition (All Doors)	118222	118221	118227
'97 - '17 Expedition (All Doors)	114032	114031	114037
'91 - '01 Explorer (not Eddie Bauer)	114032	114031	114037
'96 - '01 Mercury Mountaineer	114032	114031	114037
'75½ - '02 Fullsize E-Series Van	114032	114031	114037
'05 - '14 Fullsize E-Series Van	114032	114031	114037
'15 - '23 E-Series Outaway Cab	114032	114031	114037

ISUZU

	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	114032	114031	114037
'91 - '02 Rodeo	114032	114031	114037
'91 - '02 Amigo	114032	114031	114037
'89 - '93 PU	114032	114031	114037

JEEP

'06 - '10 Commander	114502	114501	114507
'20 - '23 Gladiator JT (Front doors only)	111252	111251	N/A
'18 - '23 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	111252	111251	N/A
'07 - '18 JK Wrangler (Front doors only, all styles)	111142	111141	N/A
'97 - '06 TJ Wrangler	110552	110551	N/A
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	114502	114501	114507
'93 - '98 Grand Cherokee	114032	114031	114037

MAZDA

'91 - '94 Navajo	114032	114031	114037
'98 - '11 B-Series PU 2-Door Only	114992	114991	114997
'83 - '93 B-Series PU	114032	114031	114037

MERCEDES

'10 - '23 Sprinter Van (Front Doors Only)	115772	115771	115777
---	--------	--------	--------

MITSUBISHI

'78 - '94 PU	114032	114031	114037
'83 - '99 Montero	114032	114031	114037
'97 - '02 Montero Sport	114032	114031	114037

NISSAN

'98 - '01 Frontier Reg cab	114032	114031	114037
'02 - '23 Frontier (All Cabs)	114032	114031	114037
'00 - '16 Xterra (Front doors)	114032	114031	114037
'86 - '01 Pathfinder	114032	114031	114037
'86 - '97 Hardbody PU	114032	114031	114037
'72 - '86 PU	114032	114031	114037

TOYOTA

'05 - '23 Tacoma Crew Cab / PreRunner (All Doors)	114502	114501	114507
'96 - '04 Tacoma Crew Cab / PreRunner (All Doors)	114032	114031	114037
'00 - '21 Tundra	114502	114501	114507
'01 - '07 Sequoia	114502	114501	114507
'74 - '95 PU	114032	114031	114037
'05 - '09 4 Runner	114502	114501	114507
'84 - '04 4 Runner	114032	114031	114037
'91 - '98 FJ80 Land Cruiser	114032	114031	114037
'80 - '91½ FJ60/FJ62 L/C	114032	114031	114037
'07 - '14 FJ Cruiser	114502	114501	114507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



SUPER HOOP SIDE STEPS



■ SUPER HOOP SIDE STEPS

The stylish and innovative design of these steps adds to a vehicle's rugged off-road look. Available in three low-maintenance, extremely durable finishes. This step is made to compliment your vehicle's appearance and is easily installed with our multi-mount system for superior strength and rigidity.

FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



XM3

POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

DIMENSION: Large 20" width, 5" depth

STEP PAD: Exclusive diamond, nonslip tread pattern

STEP: Flat step area for increased safety



SUPER HOOP SIDE STEP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '23 Colorado/Canyon	123332	123331	123337
'02 - '09 Trail Blazer/Envoy	124032	124031	124037
'02 - '13 Avalanche	124032	124031	124037
'02 - '23 Denali Truck	124032	124031	124037
'20 - '23 Sierra/Silverado 2500-3500 HD C&K PU/Fullsize all cabs All doors (GAS AND DIESEL)	123332	123331	123337
'19 - '23 Sierra/Silverado 1500 C&K PU/Fullsize all cabs (All doors)	123332	123331	123337
'88 - '19 Sierra/Silverado 1500 C&K PU/Fullsize all cabs (All doors) 2018 Body Style/Light Duty	124032	124031	124037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors (DOES NOT FIT DIESEL)	124032	124031	124037
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	124032	124031	124037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	124032	124031	124037
'76 - '91 Suburban	124032	124031	124037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	124032	124031	124037
'67 - '96 Fullsize Van	124032	124031	124037
DODGE/RAM			
'19 - '23 Ram GAS 1500 NEW BODY STYLE	129112	129111	129117
'09 - '23 Ram GAS 1500-5500 CLASSIC BODY STYLE	129772	129771	129777
'09 - '23 Ram DIESEL 2500-5500 PU beds only	129772	129771	129777
'11 - '23 Ram DIESEL 3500-5500 Chassis beds only	127442	N/A	N/A
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	129772	129771	129777
'94 - '08 Ram 1500-5500	124032	124031	124037
'74 - '93 Fullsize PU	124032	124031	124037
'97 - '09 Dakota 2-Door Only	124032	124031	124037
'02 - '06 Sprinter Van	124502	124501	124507
'07 - '09 Sprinter Van	125772	125771	125777
'74 - '92 Ram Charger	124032	124031	124037
'83 - '91 Raider	124032	124031	124037
FORD/MERCURY			
'17 - '23 Super Duty Aluminum body F250 - F350 DOES NOT FIT F350 standard/single cabs	128222	128221	128227
'99 - '16 Super Duty All Cabs (All Doors)	124872	124871	124877
'15 - '23 F-150 Aluminum body All doors/All cabs	128222	128221	128227
'04 - '14 F-150 All Cabs (All Doors)	124032	124031	124037
'01 - '03 F150 SuperCrew (All Doors)	124032	124031	124037
'97 - '04 F-150/F-250 L/D/F-150 Heritage PU (All Doors)	124032	124031	124037
'97 - '03 F-150 Quad Cab (All Doors)	124032	124031	124037
'81 - '96 F150 & 250 Light Duty/PU/Bronco All Doors/All Cabs	120252	120251	120257
'81 - '98 F250-550 Heavy Duty PU/All Doors/All Cabs	120252	120251	120257
'21 - '23 Bronco (DOES NOT FIT Bronco Sport)	124502	124501	124507
'19 - '23 Ranger Super Crew - 4 door	124502	124501	124507
'19 - '23 Ranger Super Cab - Front doors only	124502	124501	124507
'98 - '11 Ranger 2-Door Only - No Ext.Cab	124992	124991	124997
'00 - '05 Excursion (All Doors)	124872	124871	124877
'18 - '23 Expedition (All Doors)	128222	128221	128227
'97 - '17 Expedition (All Doors)	124032	124031	124037
'91 - '01 Explorer (not Eddie Bauer)	124032	124031	124037
'96 - '01 Mercury Mountaineer	124032	124031	124037
'95 - '96 F150 Lightning	120252	120251	120257
'75½ - '02 Fullsize E-Series Van	124032	124031	124037
'05 - '14 Fullsize E-Series Van	124032	124031	124037
'15 - '23 E-Series Cutaway Cab	124032	124031	124037

ISUZU	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	124032	124031	124037
'91 - '02 Rodeo	124032	124031	124037
'91 - '02 Amigo	124032	124031	124037
'89 - '93 PU	124032	124031	124037
JEEP			
'06 - '10 Commander	124502	124501	124507
'07 - '18 JK Wrangler (Front doors only, all styles)	121242	121241	N/A
'97 - '06 TJ Wrangler	120552	120551	N/A
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	124502	124501	124507
'93 - '98 Grand Cherokee	124032	124031	124037
MAZDA			
'91 - '94 Navajo	124032	124031	124037
'98 - '11 B-Series PU 2-Door Only	124992	124991	124997
'83 - '93 B-Series PU	124032	124031	124037
MERCEDES			
'10 - '23 Sprinter Van (Front Doors Only)	125772	125771	125777
MITSUBISHI			
'78 - '94 PU	124032	124031	124037
'83 - '99 Montero	124032	124031	124037
'97 - '02 Montero Sport	124032	124031	124037
NISSAN			
'96 - '01 Frontier Reg cab	124032	124031	124037
'02 - '23 Frontier (All Cabs)	124032	124031	124037
'00 - '16 Xterra (Front doors)	124032	124031	124037
'86 - '01 Pathfinder	124032	124031	124037
'86 - '97 Hardbody PU	124032	124031	124037
'72 - '86 PU	124032	124031	124037
TOYOTA			
'05 - '23 Tacoma Crew Cab / Prerunner (All Doors)	124502	124501	124507
'96 - '04 Tacoma Crew Cab / Prerunner (All Doors)	124032	124031	124037
'00 - '21 Tundra	124502	124501	124507
'01 - '07 Sequoia	124502	124501	124507
'74 - '95 PU	124032	124031	124037
'05 - '09 4 Runner	124502	124501	124507
'84 - '04 4 Runner	124032	124031	124037
'91 - '98 FJ80 Land Cruiser	124032	124031	124037
'80 - '91½ FJ60/FJ62 L/C	124032	124031	124037
'07 - '14 FJ Cruiser	124502	124501	124507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



HOOP II SIDE STEPS



■ HOOP II SIDE STEPS

This uniquely designed diamond tread pattern provides a safe, non-slip surface on the flat step area. Our exclusive multi-mount system is designed for a precision fit and easier installation. The Hoop II step is constructed from extremely strong die-cast aluminum alloy for maximum quality and durability.



XM3

POLISHED


CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP7

SAFETY YELLOW

CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides one of the strongest and easiest installations on the market
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship

DIMENSION: Compact 10" width, 3.5" depth

STEP PAD: Exclusive diamond, non-slip tread pattern

STEP: Flat step area for increased safety



HOOP II SIDE STEP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'15 - '23 Colorado/Canyon	103332	103331	103337
'02 - '09 Trail Blazer/Envoy	103992	103991	103997
'02 - '13 Avalanche	103992	103991	103997
'02 - '23 Denali Truck	103992	103991	103997
'20 - '23 Sierra/Silverado 2500-3500 HD C&K P/U/Fullsize all cabs All doors (GAS AND DIESEL)	103332	103331	103337
'19 - '23 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	103332	103331	103337
'88 - '19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors) - 2018 Body Style/Light Duty	103992	103991	103997
'88 - '19 Sierra/Silverado 2500/3500 HD all doors (DOES NOT FIT DIESEL)	103992	103991	103997
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	103992	103991	103997
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	103992	103991	103997
'76 - '91 Suburban	103992	103991	103997
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	103992	103991	103997
'67 - '96 Fullsize Van	103992	103991	103997
DODGE/RAM			
'19 - '23 Ram GAS 1500 NEW BODY STYLE	109112	109111	109117
'09 - '23 Ram GAS 1500-5500 CLASSIC BODY STYLE	109772	109771	109777
'09 - '23 Ram DIESEL 2500-5500 P/U beds only	109772	109771	109777
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	109772	109771	109777
'94 - '08 Ram 1500-5500	103992	103991	103997
'74 - '93 Fullsize P/U	103992	103991	103997
'97 - '09 Dakota 2-Door Only	103992	103991	103997
'14 - '23 ProMaster Van - Front doors only	105772	105771	105777
'02 - '06 Sprinter Van	104502	104501	104507
'07 - '09 Sprinter Van	105772	105771	105777
'74 - '92 Ram Charger	103992	103991	103997
'83 - '91 Raider	103992	103991	103997
FORD/MERCURY			
'17 - '23 Super Duty Aluminum body F250 - F550 DOES NOT FIT F550 standard/single cabs	108222	108221	108227
'99 - '16 Super Duty All Cabs (All Doors)	104812	104811	104817
'15 - '23 F-150 Aluminum body All doors/All cabs	108222	108221	108227
'04 - '14 F-150 All Cabs (All Doors)	103992	103991	103997
'01 - '03 F150 SuperCrew (All Doors)	103992	103991	103997
'97 - '04 F-150/F-250 L/D/F-150 Heritage P/U (All Doors)	103992	103991	103997
'97 - '03 F-150 Quad Cab (All Doors)	103992	103991	103997
'81 - '96 F150 & 250 Light Duty P/U/Bronco All Doors/All Cabs	102522	102521	102527
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	102522	102521	102527
'21 - '23 Bronco (DOES NOT FIT Bronco Sport)	104502	104501	104507
'19 - '23 Ranger Super Crew - 4 door	104502	104501	104507
'19 - '23 Ranger Super Cab - (All Doors)	104502	104501	104507
'98 - '11 Ranger 2-Door Only - No Ext. Cab	104992	104991	104997
'00 - '05 Excursion (All Doors)	104812	104811	104817
'18 - '23 Expedition (All Doors)	108222	108221	108227
'97 - '17 Expedition (All Doors)	103992	103991	103997
'91 - '01 Explorer (not Eddie Bauer)	103992	103991	103997
'96 - '01 Mercury Mountaineer	103992	103991	103997
'95 - '96 F150 Lightning	102522	102521	102527
'75½ - '02 Fullsize E-Series Van	103992	103991	103997
'05 - '14 Fullsize E-Series Van	103992	103991	103997
'15 - '23 E-Series Cutaway Cab	103992	103991	103997

ISUZU	XM3 POLISH	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	103992	103991	103997
'91 - '02 Rodeo	103992	103991	103997
'91 - '02 Amigo	103992	103991	103997
'89 - '93 P/U	103992	103991	103997
JEEP			
'06 - '10 Commander	104502	104501	104507
'20 - '23 Gladiator JT (Front doors only)	101252	101251	N/A
'18 - '23 J. Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	101252	101251	N/A
'07 - '18 JK Wrangler (All doors, all styles)	101242	101241	N/A
'97 - '06 TJ Wrangler	102552	102551	N/A
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	104502	104501	104507
'93 - '98 Grand Cherokee	103992	103991	103997
MAZDA			
'91 - '94 Navajo	103992	103991	103997
'98 - '11 B-Series P/U 2-Door Only	104992	104991	104997
'83 - '93 B-Series P/U	103992	103991	103997
MERCEDES			
'10 - '23 Sprinter Van (Front Doors Only)	105772	105771	105777
MITSUBISHI			
'78 - '94 P/U	103992	103991	103997
'83 - '99 Montero	103992	103991	103997
'97 - '02 Montero Sport	103992	103991	103997
NISSAN			
'98 - '01 Frontier Reg cab	103992	103991	103997
'02 - '23 Frontier (All Cabs)	103992	103991	103997
'00 - '16 Xterra (All Doors)	103992	103991	103997
'86 - '01 Pathfinder	103992	103991	103997
'86 - '97 Hardbody P/U	103992	103991	103997
'72 - '86 P/U	103992	103991	103997
TOYOTA			
'05 - '23 Tacoma Crew Cab / Prunner (All Doors)	104502	104501	104507
'96 - '04 Tacoma Crew Cab / Prunner (All Doors)	103992	103991	103997
'00 - '21 Tundra	104502	104501	104507
'01 - '07 Sequoia	104502	104501	104507
'74 - '95 P/U	103992	103991	103997
'05 - '09 4 Runner	104502	104501	104507
'84 - '04 4 Runner	103992	103991	103997
'91 - '98 FJ80 Land Cruiser	103992	103991	103997
'80 - '91½ FJ60/FJ62 L/C	103992	103991	103997
'07 - '14 FJ Cruiser	104502	104501	104507


NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



MAXgrip SIDE STEPS

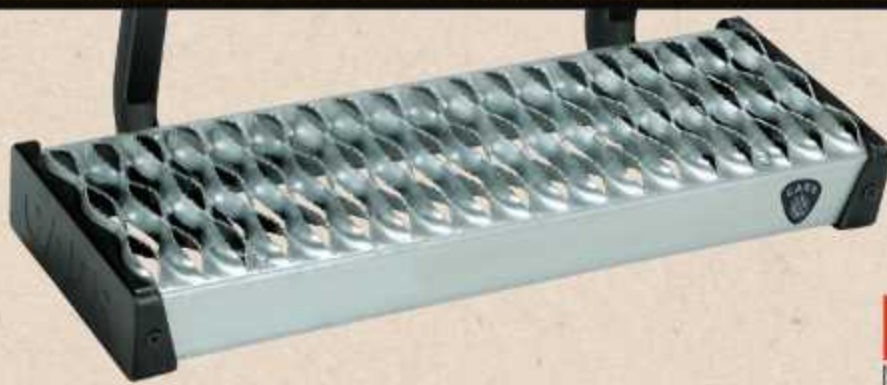

■ MAXgrip SIDE STEPS

Do you need a step that works as hard as your truck? Look no further than the NEW CARR MAXgrip Side Step, built to serve you and your fleet. Engineered for safety first with our aggressive MAXgrip treads, heavy-duty 500 lb weight capacity rating, and protective end caps. Our rugged, ergonomic design affords comfortable access to your cab while delivering unique style and appeal across the entire fleet. In addition, the exclusive CARR multi-mount system makes for easier installation and furnishes a precision fit for your specific work truck.

FEATURES

- Maximum, multi-directional slip resistant treads
- Flow-through debris step surface
- Built-in entry/exit safety underfoot
- Rigid vehicle specific custom fit rocker mount
- All mounting brackets & hardware included
- Backed by our limited lifetime warranty on materials and craftsmanship



GALVANIZED

CARR's Xtreme Galvanized finish penetrates the metal to help prevent the formation of rust and corrosion.



BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



SAFETY YELLOW


CARR's Xtreme Safety Yellow Powder Coat finish resists scratches, peeling and fading.

DIMENSION: 20" width, 7" depth

STEP PAD: MAXgrip non-slip tread pattern

STEP: Flat step area for increased safety

SOLD AS SINGLES

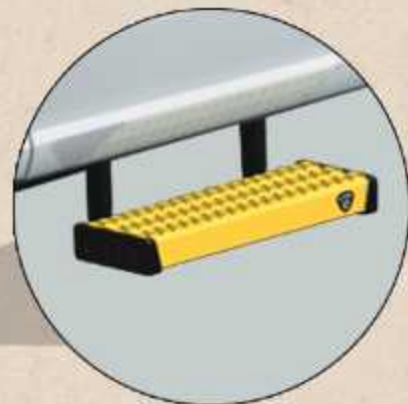

MAXgrip SIDE STEP APPLICATIONS



CHEVY/GMC	XG0 SALV	XP3 BLACK	XP7 YELLOW
'15-'23 Colorado/Canyon	133330-1	133331-1	133337-1
'02-'09 Trail Blazer/Envoy	134030-1	134031-1	134037-1
'02-'13 Avalanche	134030-1	134031-1	134037-1
'02-'23 Denali Truck	134030-1	134031-1	134037-1
'20-'23 Sierra/Silverado 2500-3500 HD C&K P/U / Fullsize / All Cabs / All doors (GAS AND DIESEL)	133330-1	133331-1	133337-1
'19-'23 Sierra/Silverado 1500 C&K P/U / Fullsize / All Cabs / All doors	133330-1	133331-1	133337-1
'88-'19 Sierra/Silverado 1500 C&K P/U / Fullsize / All Cabs / All doors - 2018 Body Style/Light Duty	134030-1	134031-1	134037-1
'88-'19 Sierra/Silverado 2500/3500 HD all doors (DOES NOT FIT DIESEL)	134030-1	134031-1	134037-1
'88-'18 Fullsize Crew Cab 1500-3500 (All doors)	134030-1	134031-1	134037-1
'73-'87 **Fullsize Pick-ups/Blazer/Suburban	134030-1	134031-1	134037-1
'76-'91 Suburban	134030-1	134031-1	134037-1
'76-'93 S10/Sonoma pickups, Blazer/Jimmy	134030-1	134031-1	134037-1
'67-'96 Fullsize Van	134030-1	134031-1	134037-1
DODGE/RAM			
'19-'23 Ram GAS 1500 NEW BODY STYLE	139110-1	139111-1	139117-1
'09-'23 Ram GAS 1500-5500 CLASSIC BODY STYLE	139770-1	139771-1	139777-1
'09-'23 Ram DIESEL 2500-5500 P/U beds only	139770-1	139771-1	139777-1
'09-'10 Ram DIESEL 3500-5500 Chassis beds only	139770-1	139771-1	139777-1
'94-'08 Ram 1500-5500	134030-1	134031-1	134037-1
'74-'93 Fullsize P/U	134030-1	134031-1	134037-1
'97-'09 Dakota 2-Door Only	134030-1	134031-1	134037-1
'02-'06 Sprinter Van	134500-1	134501-1	134507-1
'07-'09 Sprinter Van	135770-1	135771-1	135777-1
'74-'92 Ram Charger	134030-1	134031-1	134037-1
'83-'91 Raider	134030-1	134031-1	134037-1
FORD/MERCURY			
'17-'23 Super Duty Aluminum body F250 - F350 (DOES NOT FIT F350 standard/single cabs)	138220-1	138221-1	138227-1
'99-'16 Super Duty All Cabs (All Doors)	134870-1	134871-1	134877-1
'15-'23 F-150 Aluminum body All doors/All cabs	138220-1	138221-1	138227-1
'04-'14 F-150 All Cabs (All Doors)	134030-1	134031-1	134037-1
'01-'03 F150 SuperCrew (All Doors)	134030-1	134031-1	134037-1
'97-'04 F-150/F-250 L/D/F-150 Heritage P/U (All Doors)	134030-1	134031-1	134037-1
'97-'03 F-150 Quad Cab (All doors)	134030-1	134031-1	134037-1
'81-'96 F150 & 250 Light Duty/P/U/Bronco All Doors/All Cabs	130250-1	130251-1	130257-1
'81-'98 F250-550 Heavy Duty P/U All Doors/All Cabs	130250-1	130251-1	130257-1
'21-'23 Bronco (DOES NOT FIT Bronco Sport)	134500-1	134501-1	134507-1
'19-'23 Ranger Super Crew - 4 door	134500-1	134501-1	134507-1
'19-'23 Ranger Super Cab - Front doors only	134500-1	134501-1	134507-1
'98-'11 Ranger 2-Door Only	134990-1	134991-1	134997-1
'00-'05 Excursion (All Doors)	134870-1	134871-1	134877-1
'18-'23 Expedition (All Doors)	138220-1	138221-1	138227-1
'97-'17 Expedition (All Doors)	134030-1	134031-1	134037-1
'91-'01 Explorer (not Eddie Bauer)	134030-1	134031-1	134037-1
'96-'01 Mercury Mountaineer	134030-1	134031-1	134037-1
'95-'96 F150 Lightning	130250-1	130251-1	130257-1
'75½-'02 Fullsize E-Series Van	134030-1	134031-1	134037-1
'05-'14 Fullsize E-Series Van	134030-1	134031-1	134037-1
'15-'23 E-Series Cutaway Cab	134030-1	134031-1	134037-1

ISUZU	XG0 SALV	XP3 BLACK	XP7 YELLOW
'84-'02 Trooper	134030-1	134031-1	134037-1
'91-'02 Rodeo	134030-1	134031-1	134037-1
'91-'02 Amigo	134030-1	134031-1	134037-1
'89-'93 P/U	134030-1	134031-1	134037-1
JEEP			
'06-'10 Commander	134500-1	134501-1	134507-1
'07-'18 JK Wrangler (Front doors only, all styles)	131240-1	131241-1	N/A
'97-'06 TJ Wrangler	130550-1	130551-1	N/A
'02-'12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	134500-1	134501-1	134507-1
'95-'98 Grand Cherokee	134030-1	134031-1	134037-1
MAZDA			
'91-'94 Navajo	134030-1	134031-1	134037-1
'98-'11 B-Series P/U 2-Door Only	134990-1	134991-1	134997-1
'83-'93 B-Series P/U	134030-1	134031-1	134037-1
MERCEDES			
'10-'23 Sprinter Van (Front Doors Only)	135770-1	135771-1	135777-1
MITSUBISHI			
'78-'94 P/U	134030-1	134031-1	134037-1
'83-'99 Montero	134030-1	134031-1	134037-1
'97-'02 Montero Sport	134030-1	134031-1	134037-1
NISSAN			
'98-'01 Frontier Reg cab	134030-1	134031-1	134037-1
'02-'23 Frontier (All Cabs)	134030-1	134031-1	134037-1
'00-'16 Xterra (Front doors)	134030-1	134031-1	134037-1
'86-'01 Pathfinder	134030-1	134031-1	134037-1
'86-'97 Hardbody P/U	134030-1	134031-1	134037-1
'72-'86 P/U	134030-1	134031-1	134037-1
TOYOTA			
'05-'23 Tacoma Crew Cab / PreRunner (All Doors)	134500-1	134501-1	134507-1
'96-'04 Tacoma Crew Cab / PreRunner (All Doors)	134030-1	134031-1	134037-1
'00-'21 Tundra	134500-1	134501-1	134507-1
'01-'07 Sequoia	134500-1	134501-1	134507-1
'74-'95 P/U	134030-1	134031-1	134037-1
'05-'09 4 Runner	134500-1	134501-1	134507-1
'84-'04 4 Runner	134030-1	134031-1	134037-1
'91-'98 FJ80 Land Crsr	134030-1	134031-1	134037-1
'80-'91½ FJ60/FJ62 L/C	134030-1	134031-1	134037-1
'07-'14 FJ Cruiser	134500-1	134501-1	134507-1

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.

Sold ONLY as a single step, not pairs



HD HITCH STEPS



LOAD CAPACITY
✓ HEAVY DUTY
650 LBS



HD HITCH STEPS

FEATURES

- Non-slip surface
- Requires standard pin and clip
- Folds up when not in use
- Provides easy access to back of vehicle
- Fits all 2" hitch receivers

GRAPHICS FOR HD HITCH STEPS



HD HITCH STEP APPLICATIONS

(SOLD AS SINGLES)

XP3 BLACK

Universal Hitch Step - Blank	183012
Universal Hitch Step - USA	183022
Universal Hitch Step - American Flag	183032
Universal Hitch Step - Horse	183042
Universal Hitch Step - MY TOY	183052
Universal Hitch Step - CARR logo	183062
Universal Hitch Step - Checkered Flags	183082
Universal Hitch Step - U.S. Marines	183142
Universal Hitch Step - Dirt Bike	183152
Universal Hitch Step - Quad	183162
Universal Hitch Step - Pick-up	183172
Universal Hitch Step - Jeep	183182
Universal Hitch Step - SUV	183192
Universal Hitch Step - US Coast Guard	183202
Universal Hitch Step - Fire & Rescue	183212
Universal Hitch Step - Law Enforcement	183222
Universal Hitch Step - US National Guard	183232
Universal Hitch Step - Reflector	183242
Universal Hitch Step - Black Out (All Black)	183252

LIGHT MOUNT / LIGHT BARS

LIGHTS NOT INCLUDED



JL 180° LIGHT MOUNT

The JL 180° Light Mount is designed for effortless 180° light rotation on the driver and passenger side of a JL Wrangler. It securely mounts to the A-Pillar factory holes and can accommodate 3" lights. Featuring a simple pull pin design, the JL 180° Light Mount has 7 different rotation positions—perfect for on-the-fly adjustments.

FEATURES

- Durable powder coat for corrosion protection and rugged use
- Easily adjustable 180° rotating feature
- Precise fit using factory holes
- Antenna cutout
- Super easy install
- Solid mount with virtually no vibration
- Accommodates 3" lights

Use the JL 180° to easily adjust additional vehicle lighting without tools or hassle. Lights on each side together provide 360 coverage for off-road, camping, and recreational use.

JEEP JL 180 LIGHT MOUNT APPLICATIONS XP3 BLACK

'18 - '23	JL Wrangler All Styles	210291
'20 - '23	JT Gladiator All Styles	210291



C-PROFILE ROTA LIGHT BAR

- Wide cast aluminum mounting base
- Universal fit

All light bars have a black powder coat, are designed to securely mount to the roof gutter of vehicles with internal gutters, and can be installed with our gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment. Our Deluxe Light Bar has the most height clearance, with the C-Profile slightly lower, and the M-Profile the lowest clearance of the three.

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS

LIGHTS NOT INCLUDED



DELUXE LIGHT BAR

- Wide cast aluminum mounting base
- Universal fit



DELUXE ROTA LIGHT BAR

- A CARR exclusive feature that allows the light bar to rotate down for extra clearance or to protect your lighting investment
- Universal fit



M-PROFILE LIGHT BAR

- Medium profile design looks attractive on any vehicle
- Universal fit

RAIN GUTTER KITS FOR LIGHT BARS PAGES 19 - 20

Our Rain Gutter brackets are available in black powder coated stainless steel. All of these brackets are uniquely designed to fit your vehicle, and our roof-mounted light bars simply clamp on to these brackets for an easy and secure installation.



LIGHT BARS

	DELUXE BAR	DELUXE ROTA BAR	M-PROFILE BAR	C PROFILE ROTA BAR	RAIN GUTTER KITS
CHEVY/GMC	XP3 BLACK	XP3 BLACK	XP3 BLACK	XP3 BLACK	XP3 BLACK
'15 - '23 Colorado/Canyon	210341	210871	210701	210111	220061
'04 - '14 Colorado/Canyon	210341	210871	210701	210111	220051
'02 - '09 Trail Blazer/Envoy	210341	210871	210701	210111	220541
'02 - '13 Avalanche	210341	210871	210701	210111	220541
'02 - '23 Denali Truck	210341	210871	210701	210111	220541
'19 - '23 Sierra/Silverado C&K PU / Fullsize & HD	210341	210871	210701	210111	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210341	210871	210701	210111	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210341	210871	210701	210111	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210341	210871	210701	210111	223411
'14 - '23 Fullsize Crew Cab 1500-3500 (All doors)	210341	210871	210701	210111	220061
'00 - '13 Fullsize Crew Cab	210341	210871	210701	210111	220541
'92 - '99 Fullsize Crew Cab	210341	210871	210701	210111	223411
'73 - '91 Fullsize Crew Cab	210341	210871	210701	210111	NR
'73 - '87 Fullsize Pick-up, Blazer/Suburban	210341	210871	210701	210111	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	210341	210871	210701	210111	220541
'92 - '99 Suburban	210341	210871	210701	210111	223411
'76 - '91 Suburban	210341	210871	210701	210111	NR
'92 - '99 Yukon/Tahoe	210341	210871	210701	210111	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	210341	210871	210701	210111	220041
'67 - '96 Fullsize Van	210341	210871	N/A	210111	NR
DODGE/RAM					
'19 - '23 Ram 1500 NEW BODY STYLE All Cabs/All Doors	210341	210871	210701	210111	220061
'19 - '23 Ram 1500 All Cabs/All Doors CLASSIC	210341	210871	210701	210111	220081
'19 - '23 Ram 2500-5500 All Cabs/All Doors	210341	210871	210701	210111	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	210341	210871	210701	210111	220081
'09 - '13 Ram 1500 All Cabs/All Doors	210341	210871	210701	210111	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210341	210871	210701	210111	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210341	210871	210701	210111	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	210341	210871	210701	210111	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	210341	210871	210701	210111	221501
'74 - '93 Fullsize Pickup	210341	210871	N/A	210111	NR
'05 - '09 Durango	210341	210871	210701	210111	220541
'05 - '11 Dakota	210341	210871	210701	210111	220541
'97 - '04 Dakota	210341	210871	210701	210111	220051
'74 - '92 Ram Charger	210341	210871	N/A	210111	NR
'83 - '91 Raider	210341	210871	210701	210111	NR
FORD/MERCURY					
'99 - '16 Super Duty All Cabs	210341	210871	210701	210111	220051
'19 - '23 Ranger - All Styles	210341	210871	210701	210111	220061
'04 - '14 F-150	210341	210871	N/A	210111	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	210341	210871	N/A	210111	NR
'81 - '98 F250-550 Heavy Duty Pickup	210341	210871	N/A	210111	NR
'67 - '80 Fullsize Pick-up/Bronco	210341	210871	N/A	210111	NR
'00 - '05 Excursion	210341	210871	210701	210111	220051
'91 - '01 Explorer (not Eddie Bauer)	210341	210871	210701	210111	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	210341	210871	210701	210111	222741
'95 - '96 F150 Lightning	210341	210871	210701	210111	NR
'75½ - '02 Fullsize E-Series Van	210341	210871	210701	210111	NR
'05 - '14 Fullsize E-Series Van	210341	210871	210701	210111	NR

NOTE: Vehicles not listed have no applications

LIGHT BARS



	DELUXE BAR	DELUXE ROTA BAR	M-PROFILE BAR	C PROFILE ROTA BAR	RAIN GUTTER KITS
ISUZU					
'84 - '02 Trooper	210341	210871	210701	210111	220041
'91 - '02 Rodeo	210341	210871	210701	210111	220051
'91 - '02 Amigo	210341	210871	210701	210111	220051
'89 - '93 Pick-up	210341	210871	210701	210111	NR
JEEP					
'05 - '23 Grand Cherokee	210341	210871	210701	210111	220051
'93 - '98 Grand Cherokee	210341	210871	210701	210111	223411
'06 - '10 Commander	210341	210871	210701	210111	220051
'84 - '00 Cherokee	210341	210871	210701	210111	NR
MAZDA					
'91 - '94 Navajo	210341	210871	210701	210111	222741
'83 - '93 B-Series Pick-up	210341	210871	210701	210111	220051
MITSUBISHI					
'78 - '94 Pick-up	210341	210871	210701	210111	NR
'83 - '99 Montero	210341	210871	210701	210111	NR
'97 - '02 Montero Sport	210341	210871	210701	210111	220041
NISSAN					
'98 - '01 Frontier Reg cab	210341	210871	210701	210111	220051
'02 - '21 Frontier Crew Cab	210341	210871	210701	210111	220061
'00 - '16 Xterra - Without option roof rack	210341	210871	210701	210111	220061
'04 - '11 Pathfinder	210341	210871	210701	210111	220061
'86 - '97 Hardbody P/U	210341	210871	210701	210111	220051
'72 - '86 Pick-up	210341	210871	210701	210111	NR
TOYOTA					
'05 - '23 Tacoma/PreRunner/Crew Cab	210341	210871	210701	210111	220041
'96 - '04 Tacoma/PreRunner/Crew Cab	210341	210871	210701	210111	220051
'07 - '21 Tundra	210341	210871	210701	210111	220041
'00 - '06 Tundra	210341	210871	210701	210111	220051
'01 - '07 Sequoia	210341	210871	210701	210111	220051
'89 - '95 Pick-up	210341	210871	210701	210111	220051
'74 - '88 Pick-up	210341	210871	210701	210111	NR
'05 - '07 4 Runner	210341	210871	210701	210111	220041
'96 - '04 4 Runner	210341	210871	210701	210111	220051
'84 - '95 4 Runner	210341	210871	210701	210111	220051
'93 - '99 T-100	210341	210871	210701	210111	220051
'80 - '91 1/2 FJ60/FJ62 L/C	210341	210871	210701	210111	NR
'07 - '14 FJ Cruiser	210341	210871	210701	210111	220041

NOTE: Vehicles not listed have no applications
 NOTE: "NR" means no rain gutter kit is required.

LIMITED LIFETIME WARRANTY

CARR offers a Limited Lifetime Warranty against manufacturer defects on the structural integrity and finish on the CARR product.

All warranties start from the consumer's date of purchase. Consumer must take the product to a CARR dealer for inspection and processing. Dealers are to return warranty items to their CARR distributor for replacement or credit. CARR reserves the right to approve or deny a warranty claim if it is determined that the product has been damaged due to abuse.

TERMS AND CONDITIONS

Please visit Carr.com or contact our customer service for more information.



TESTED • TRUSTED • TOUGH

www.CARR.com

SALES@CARR.COM | 800-800-1084